

# Fieldstand

"Field's Standard"

Model:     MHN-01    

**MOHINORA**

## REFERENCE:

This timepiece uses a Electronic Time Setting at the case back.

For adjusting the time:

1.-Press gently the back button for continuously adjust the time on the dial.

## INSTRUCTIONS:

1.-For placing a new display, align the screws from the display with the groove that is marked on the case of the timepiece.

2.-Gently press the display into the case keeping the alignment of them.

3.-Now that the display is aligned, unscrew slightly the backcase and press the display firmly.

4.-Once pressed, screw the backcase again; the display should be strongly secured to the timepiece.

5.-For removing a display, use the provided key (or a needle) and place it on the groove of the case.

6.-Finally push the key towards the display and at the same time upwards, as if it was a lever, use your fingers to completely remove the display.

## CARE OF USE:

1.-Do not open unless replacement of battery or change of displays.

2.-Do not wear in extreme temperatures or strong magnetic fields.

3.-Do not submerge for prolonged periods of time.

## SPECIFICATIONS:

The movement in this timepiece uses a 379 Standard Battery or SR521SW.

Battery should be replaced every 60 months.

Precision is recorded to be +20/-10 seconds per month.

**Fieldstand**